


TYPICAL MODEL H750 AND LARGER

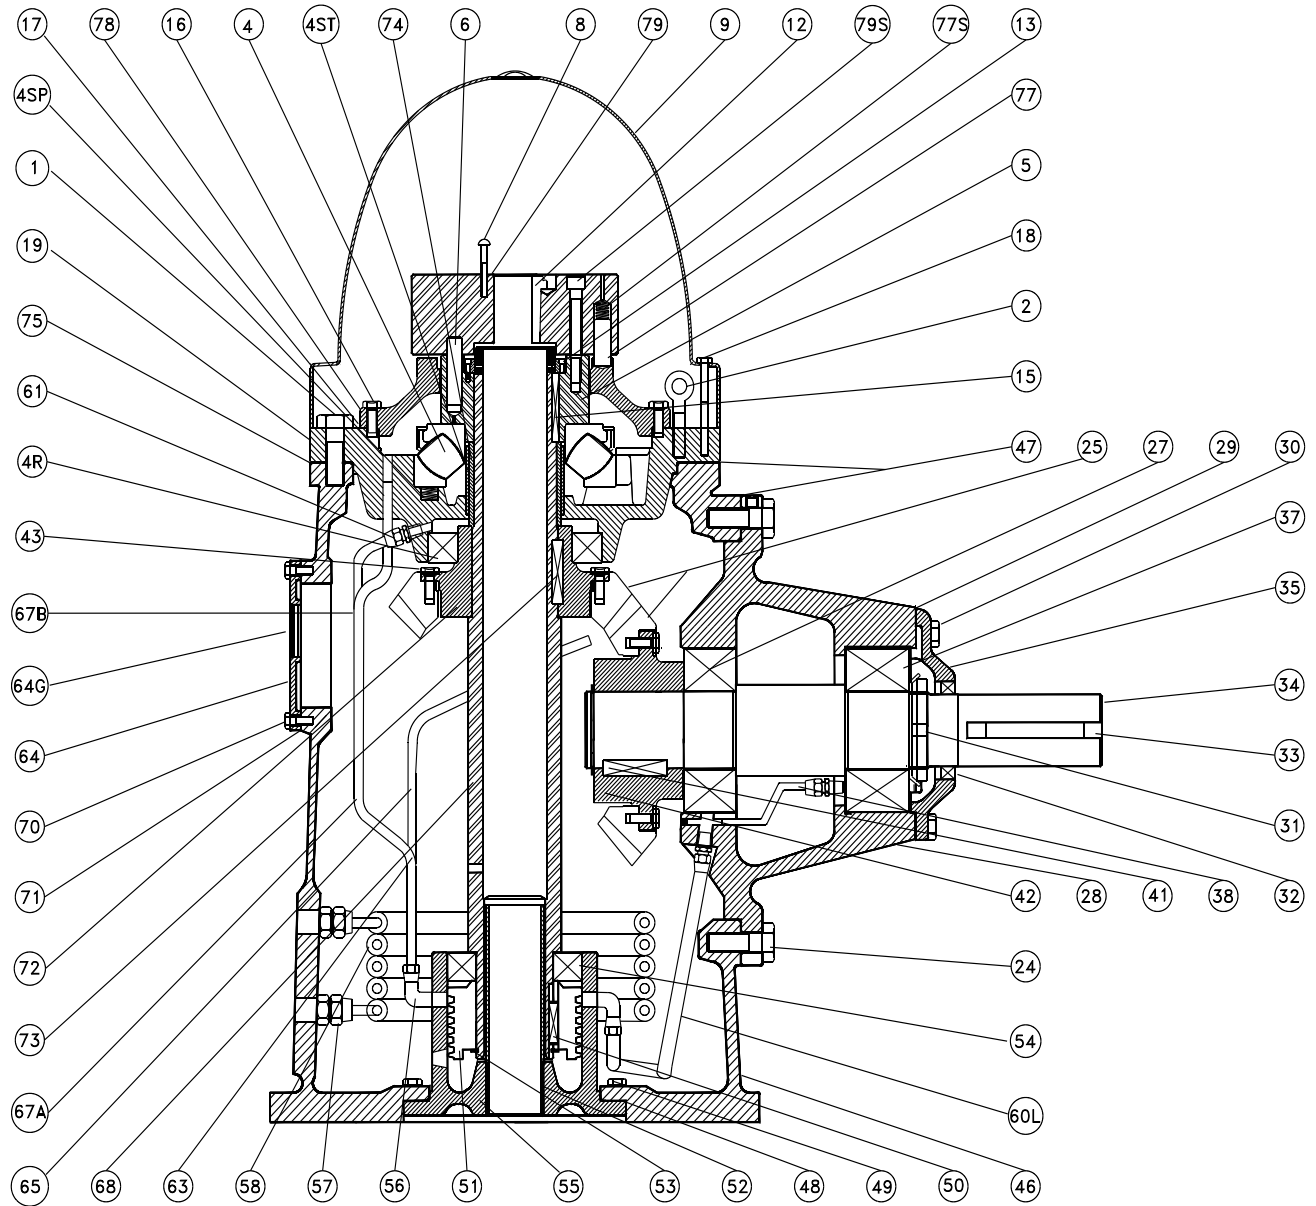

No.	Part Name	No.	Part Name	No.	Part Name	No.	Part Name
1	Capscrew-Thrust Cage	24	Capscrew-Horiz.Hsg.	46	Main Housing	64G	Oil Sight Glass
2	Lifting Eyebolt	25	Gears	47	Shims	65	Oil Tube To Gears
4	Thrust Bearing	27	Inner Bearing	48	Gasket-Pump Housing	67	Oil Tube to Thrust Brg.
4R	Radial Bearing	28	Horizontal Housing	49	Capscrew-Pump Housing	68	Hollow Shaft
4SP	Spring - Thrust Brg	29	Gasket-Horz. Hsg. Cover	50	Key-Pump Runner	70	Capscrew-Insp. Plate
4ST	Upper Seal Tube	30	Capscrew-Horz. Hsg. Cover	51	Pump Runner	71	Gasket-Insp. Plate
5	Lower Coupling	31	Locknut & Washer	52	Seal Tube	72	Gear Hub-Vert.
6	Coupling Pin	32	Oil Seal	53	External Snap Ring	73	Key-Driven Gear
8	Capscrew	33	Key	54	Pump Bearing	74	Vertical M.D. Spacer
9	Dome	34	Drive Shaft	55	Pump Housing	75	Shim-Thrust Brg. Cage
12	Gib Key	35	Horizontal Hsg. Cover	56	Oil Tube From Pump	77	Ratchet Pins
13	External Snap Ring	37	Outer Bearing	57	Cooler Flexible Fittings	78	Thrust Bearing Cover
15	Key-Lower Coupling	38	Oil Tube To Outer Brg	58	Oil Cooler	79	Upper Clutch
16	Capscrew-Thrust Cover	41	Key-Drive Gear	60L	Oil Tube To Inner Bearing		
17	Gasket-Thrust Cover	42	Gear Hub-Horz.	61	Compression Fitting		
18	Capscrew-Dome	43	Capscrew-Gear Hub	63	Oil Tube Clamp		
19	Thrust Bearing Cage			64	Inspection Plate		